



KABINA PRYSZNICOWA VIVA
 PROSTOKĄTNA LEWA
 INSTRUKCJA MONTAŻU

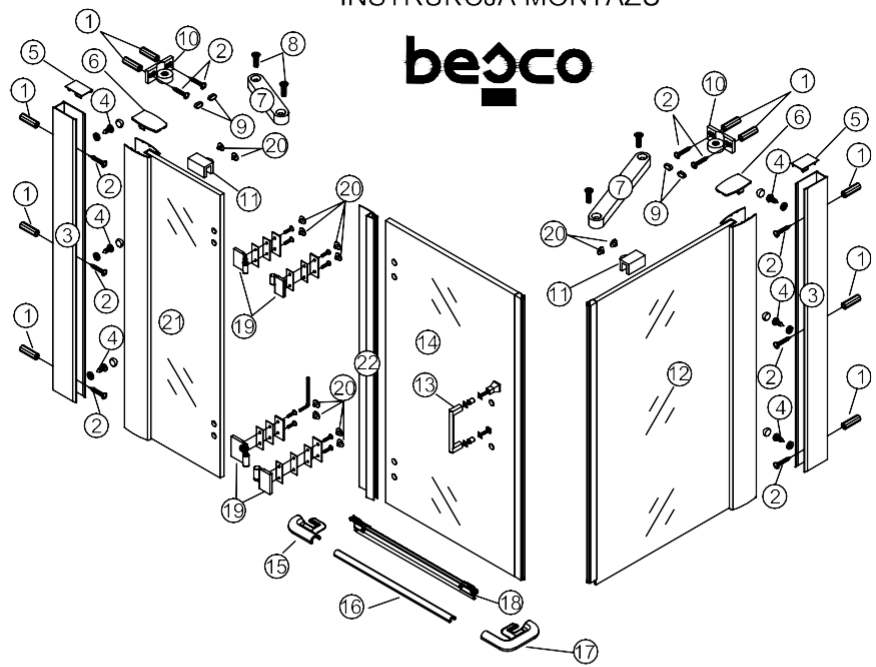


1 10szt.	2 ST4*30 10szt.	3 2szt.	4 ST4*12 6szt.	5 2szt.	6 2szt.
7 2szt.	8 M6*16 4szt.	9 4szt.	10 Up 2szt.	11 2szt.	12 1szt.
13 1szt.	14 1szt.	15 1szt.	16 1szt.	17 1szt.	18 1szt.
19 2szt.	20 12szt.	21 1szt.	22 1szt.		

1


8

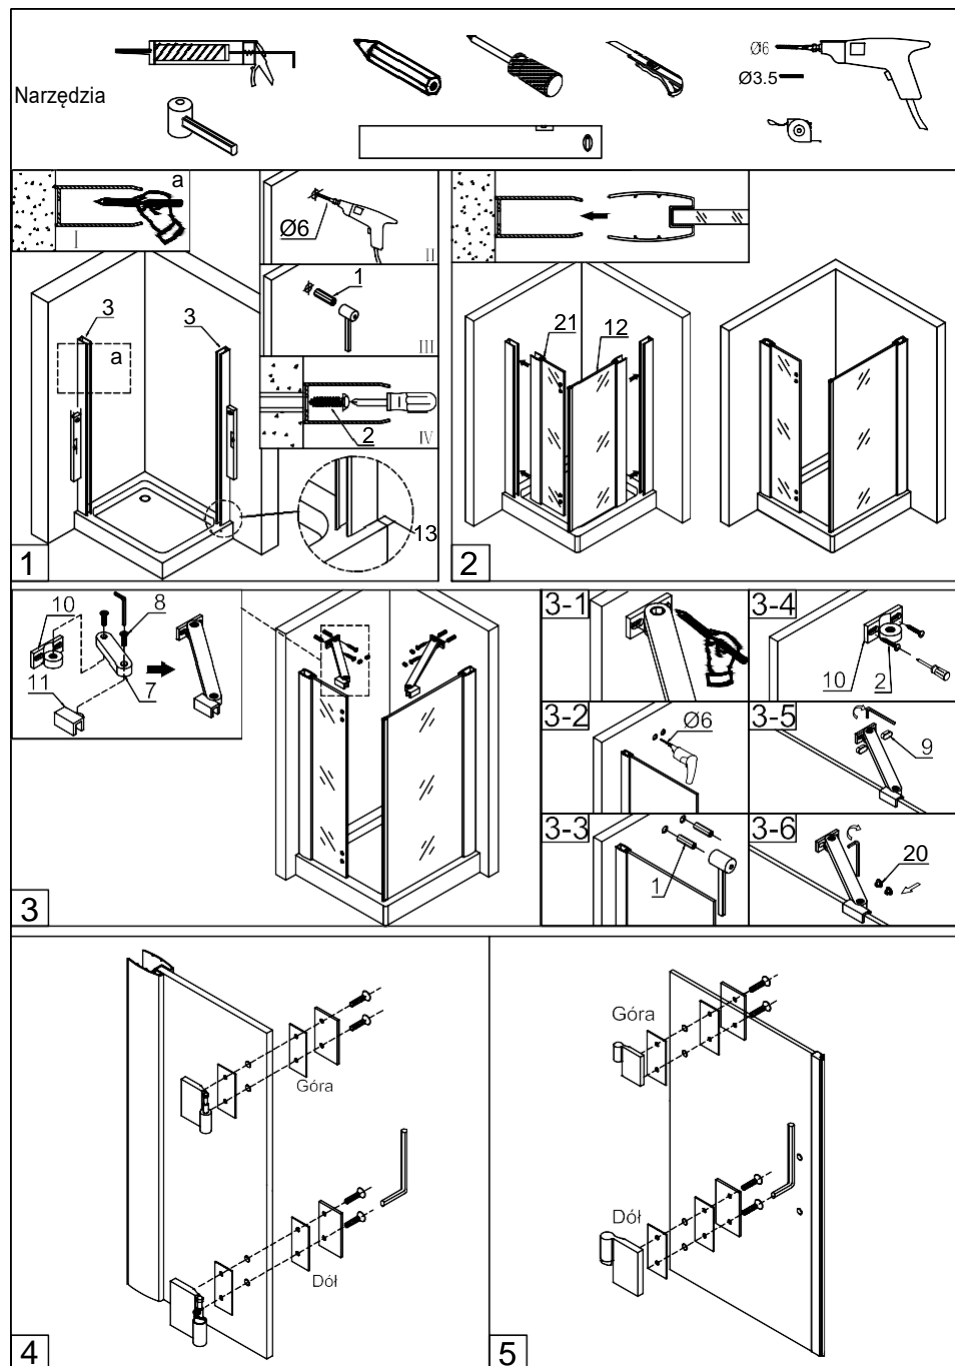

2

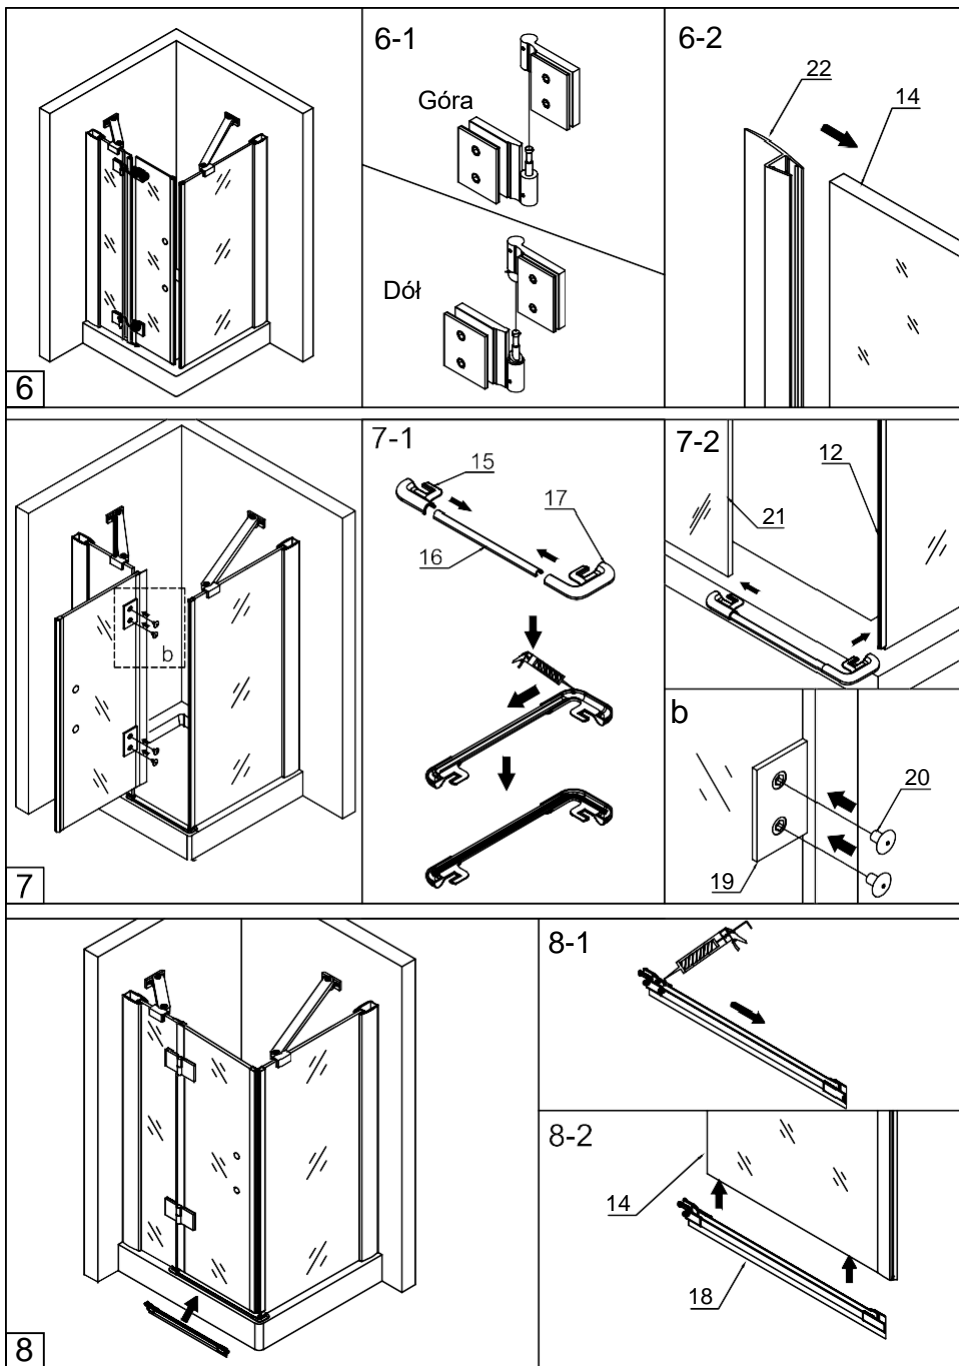

1

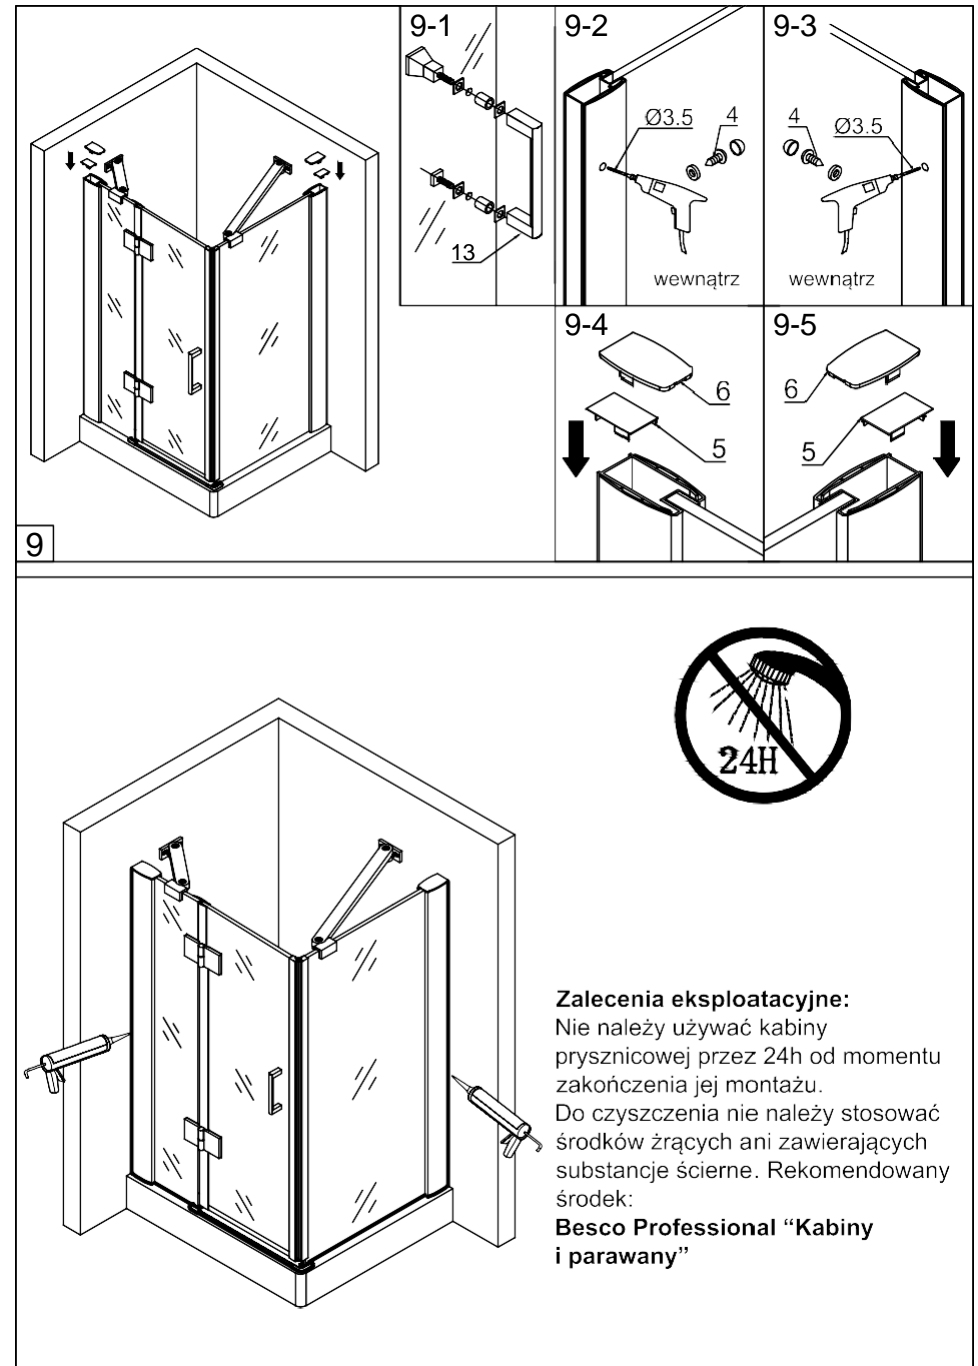

2