


KABINA PRYSZNICOWA VIVA
 PROSTOKĄTNA PRAWA
 INSTRUKCJA MONTAŻU



bećco

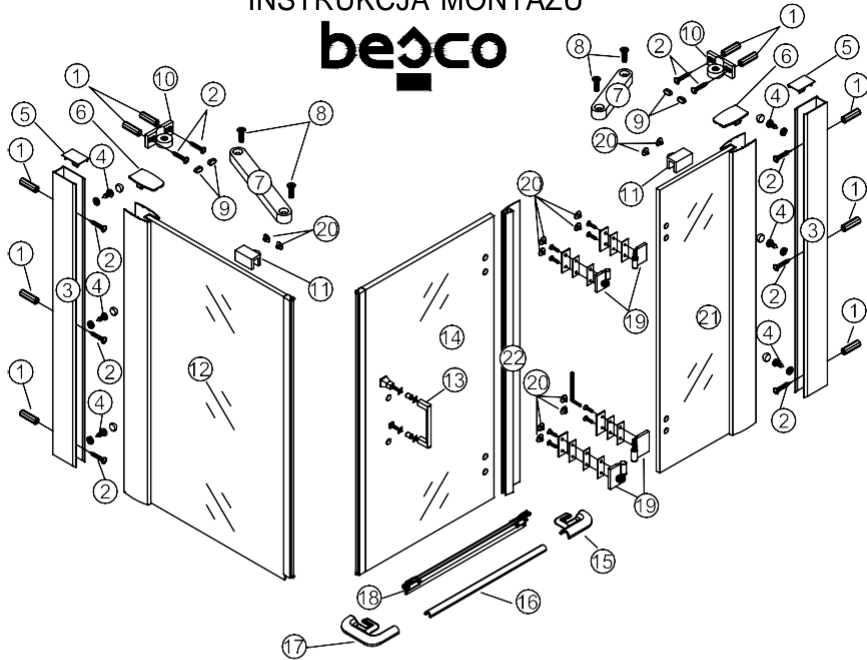

1 10szt. 	2 10szt. ST4*30 	3 2szt. 	4 6szt. ST4*12 	5 2szt. 	6 2szt.
7 2szt. 	8 4szt. M6*16 	9 4szt. 	10 2szt. 	11 2szt. 	12 1szt.
13 1szt. 	14 1szt. 	15 1szt. 	16 1szt. 	17 1szt. 	18 1szt.
19 2szt. 	20 12szt. 	21 1szt. 	22 1szt. 		


1

Narzędzia

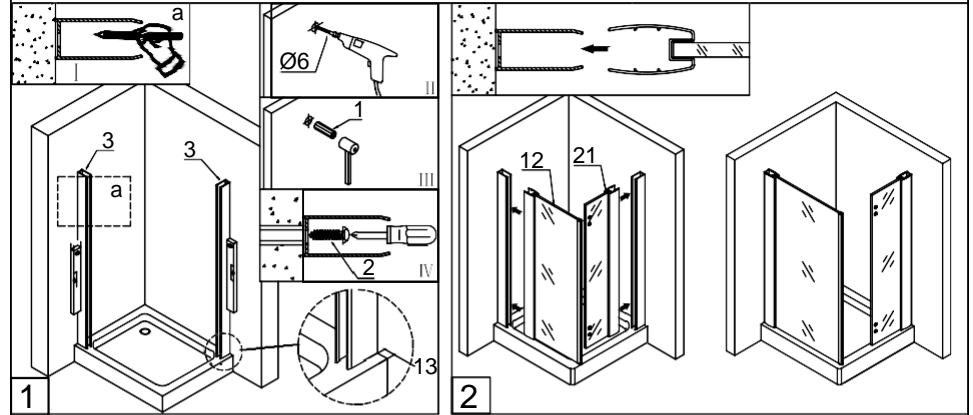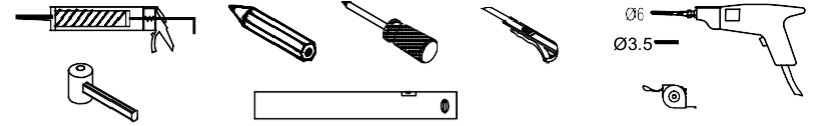


1

2

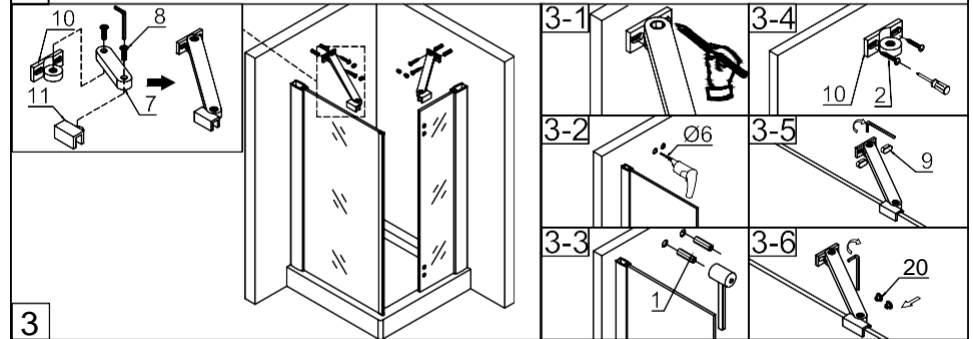


3

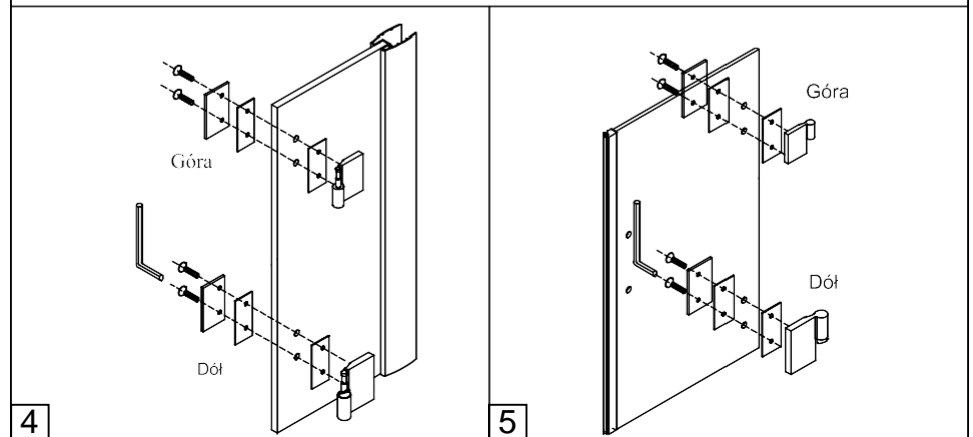

4

5

2

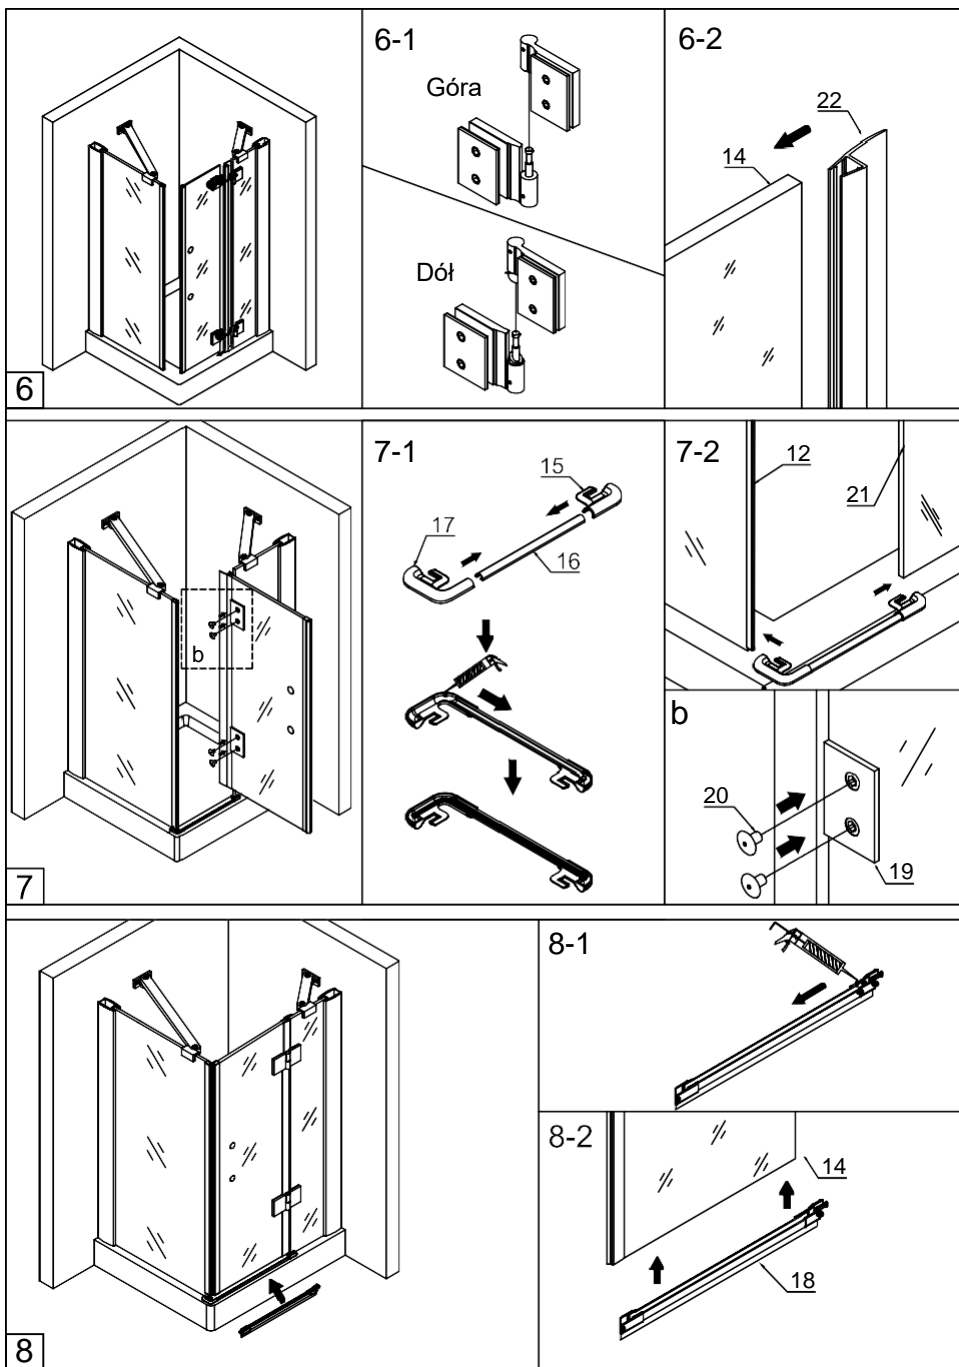

1



2