




INSTRUKCJA MONTAŻU WANNY WOLNOSTOJĄCEJ

Materiał: Mineral DuraBe

Modele: Assos, Assos S-line, Goya, Gloria, Keya, Lova, Moya, Viya

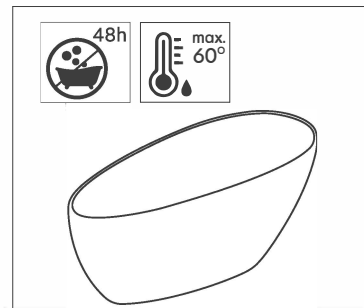

Dziękujemy za wybór marki Besco. Życzymy zadowolenia z użytkowania naszych produktów

Szanowny Kliencie,

przed rozpoczęciem montażu prosimy o zapoznanie się z niniejszą instrukcją oraz warunkami załączonej gwarancji.

Zalecenia:

1. Wymagany czas odstania wanny przed montażem w temperaturze pokojowej to 48 godzin.
2. Produkt należy systematycznie czyścić, używając delikatnych środków czyszczących. Należy unikać środków zawierających drobinki ściernie, które mogą uszkodzić wannę. Nie należy stosować środków zawierających substancje żrące.
3. Należy unikać kontaktu wanny z barwiącymi substancjami, które mogłyby trwale odbarwić produkt np.: farby, lakiery do paznokci itp.
4. Materiał z którego wykonana jest wanna, pozwala w przypadku powstania niewielkich zarysowań na ich usunięcie. Należy wówczas zastosować ogólnodostępną pastę polerską. W przypadku głębokich rys lub odprysków, możliwe jest nabycie specjalnego zestawu naprawczego u producenta.
5. Maksymalna temperatura wody wynosi 60°C
6. Używając wannę, należy unikać dużej amplitudy temperatur wody.

UWAGA! Montaż wanny należy powierzyć wykwalifikowanemu wykonawcy. Wady powstałe w związku z nieprawidłowym montażem, jak i użytkowaniem wanny nie stanowią podstawy reklamacji.

Montaż wanny:


1. Rozpakować wannę, która dostarczana jest na palecie, przymocowana za pomocą śrub i/ lub taśmy transportowej w kartonowym opakowaniu lub drewnianej skrzyni.
2. Ustawić wannę w miejscu docelowym
3. Dołączone nóżki wypoziomować na równi z krawędziami wanny
4. Dokręcić zamontowany / dołączony syfon
5. Podłączyć odpływ z syfonem oraz sprawdzić szczelność przyłączy poprzez napełnienie wanny niewielką ilością letniej wody.
6. Zaleca się, aby sylikonowanie wykonać po kilku dniach użytkowania, pozwoli to na upewnienie się o szczelności przyłączy.
7. Należy nanieść sylikon na całym obrysie wanny, zostawiając 2 przerwy dylatacyjne, po około 5 cm
8. Nadmiar sylikonu usunąć, pozostawić do wyschnięcia według zaleceń.



FREESTANDING BATHUB INSTALLATION MANUAL

Material: Mineral DuraBe

Models: Assos, Assos S-line, Goya, Gloria, Keya, Lova, Moya, Viya

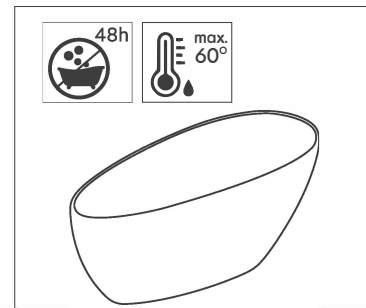

Thank you for choosing the Besco brand. We wish you satisfaction with the use of the products.

Dear Customer,

Please read this manual and the conditions of the attached warranty before starting the installation.

Recommendations:

1. The bathtub should be left to settle at the room temperature for 48 hours prior to installation.
2. The product should be cleaned regularly with the use of delicate cleaning agents. Avoid using agents that contain abrasive particles that can damage the bathtub. Do not use products containing corrosive substances.
3. Avoid contact of the bathtub with dyeing substances that could permanently discolor the product, e.g. paints, nail polishes, etc.
4. The material from which the bathtub is made allows reparation of slight scratches with the use of generally available polishing paste. In case of deep scratches or chips it is possible to purchase a special repair kit from the manufacturer.
5. The maximum water temperature is 60° C.
6. Avoid high amplitudes of water temperature when using the bathtub.

CAUTION! *The bathtub should be installed by a qualified contractor. Defects resulting from improper assembly and use of the bathtub do not constitute grounds for complaint.*

Bathtub installation:

1. Unpack the bath, which is delivered on a pallet, fixed with screws and / or conveyor tape in a cardboard box or wooden crate.
2. Place the bathtub in its final location.
3. Level up adjustable legs at the bottom of the bathtub to the same level as the edges of the bathtub.
4. Tighten the installed or supplied separately siphon.
5. Connect the drain with a siphon and check the connections for leaks by filling the bathtub with a small amount of lukewarm water.
6. It is recommended to apply silicone between the bathtub bottom and the floor only after few days of the bathtub use to ensure that connections are tight.
7. Apply silicone on the entire contour of the bathtub bottom, leaving 2 expansion gaps, approx. 5 cm.
8. Remove the excess silicone and let it dry as recommended.