



INSTRUKCJA MONTAŻU **WANNY WOLNOSTOJĄCEJ**

Materiał: Mineral DuraBe

Modele: Siya

Dziękujemy za wybór marki Besco. Życzymy zadowolenia z użytkowania naszych produktów.

Szanowny Kliencie, przed rozpoczęciem montażu prosimy o zapoznanie się z niniejszą instrukcją oraz warunkami załączonej gwarancji.

Zalecenia:

1. Wymagany czas odstania wanny przed montażem w temperaturze pokojowej to 48 godzin.
2. Produkt należy systematycznie czyścić, używając delikatnych środków czyszczących. Należy unikać środków zawierających drobinki ściernie, które mogą uszkodzić wannę. Nie należy stosować środków zawierających substancje żrące.
3. Należy unikać kontaktu wanny z barwiącymi substancjami, które mogłyby trwale odbarwić produkt np.: farby, lakiery do paznokci itp.
4. Materiał, z którego wykonana jest wanna, pozwala w przypadku powstania niewielkich zarysowań na ich usunięcie. Należy wówczas zastosować ogólnodostępną pastę polerską. W przypadku głębokich rys lub odprysków, możliwe jest nabycie specjalnego zestawu naprawczego u producenta.
5. Maksymalna temperatura wody wynosi 60°C.
6. Używając wannę, należy unikać dużej amplitudy temperatur wody.

UWAGA! Montaż wanny należy powierzyć wykwalifikowanemu wykonawcy. Wady powstałe w związku z nieprawidłowym montażem, jak i użytkowaniem wanny nie stanowią podstawy reklamacji.

Montaż wanny:

UWAGA! Syfon jest wpuszczany w posadzkę.

1. Rozpakować wannę, która dostarczana jest na palecie, przymocowana za pomocą śrub i/lub taśmy transportowej w kartonowym opakowaniu lub drewnianej skrzyni.
2. Ostrożnie wyjąć wannę.
3. Sprawdzić kompletność i zgodność wanny z zamówieniem. W przypadku stwierdzenia jakichkolwiek braków, wad, uszkodzeń (np. transportowych), nie należy jej montować.
4. Ustawić wannę w miejscu docelowym.
5. Odrysować zarys dolnej krawędzi (rys. A)
6. Ostrożnie przechylić wannę na bok. Miejsca styku wanny z posadzką zabezpieczyć wcześniej kartonem. Wypełnić silikonem wewnętrzną linię zarysowania krawędzi z pkt. B, zostawić dwie przerwy dylatacyjne na około 5 cm po przeciwnych stronach wanny. Następnie podłączyć syfon.
7. Postawić wannę w obrębie obrysu (rys. C). Nadmiar silikonu usunąć i pozostawić do wyschnięcia.





FREESTANDING BATHTUB INSTALLATION MANUAL

Material: Mineral DuraBe

Modele: Siya

Thank you for choosing the Besco brand. We wish you satisfaction with the use of the products.

Dear Customer, please read this manual and the conditions of the attached warranty before starting the installation.

Recommendations:


1. The bathtub should be left to settle at the room temperature for 48 hours prior to installation.
2. The product should be cleaned regularly with the use of delicate cleaning agents. Avoid using agents that contain abrasive particles that can damage the bathtub. Do not use products containing corrosive substances.
3. Avoid contact of the bathtub with dyeing substances that could permanently discolor the product, e.g. paints, nail polishes, etc.
4. The material from which the bathtub is made allows reparation of slight scratches with the use of generally available polishing paste. In case of deep scratches or chips it is possible to purchase a special repair kit from the manufacturer.
5. The maximum water temperature is 60° C.
6. Avoid high amplitudes of water temperature when using the bathtub.

CAUTION! The bathtub should be installed by a qualified contractor. Defects resulting from improper assembly and use of the bathtub do not constitute grounds for complaint.

Installation of the bathtub:


ATTENTION! The siphon must be recessed into the floor.

1. Unpack the bath, which is delivered on a pallet, fixed with screws and / or conveyor tape in a cardboard box or wooden crate.
2. Carefully remove the bathtub.
3. Check the completeness and compliance of the bathtub with the order. In the event of any deficiencies, defects or damages (e.g. transport), do not install the bathtub.
4. Place the bathtub in its final location.
5. Mark the contour of the bottom edge (Fig. A).
6. Carefully tilt the bathtub to the side. Protect the contact area between the bathtub and the floor with cardboard beforehand. Fill the inner outline of the edge marked in point B, leaving two expansion gaps of approx. 5 cm on opposite sides of the bathtub. Then connect the siphon.
7. Place the bathtub within the contour (fig. C). Remove the excess silicone and let it dry as recommended.




MWT

(A)

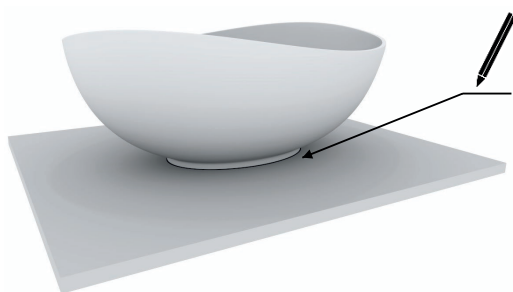

(B)

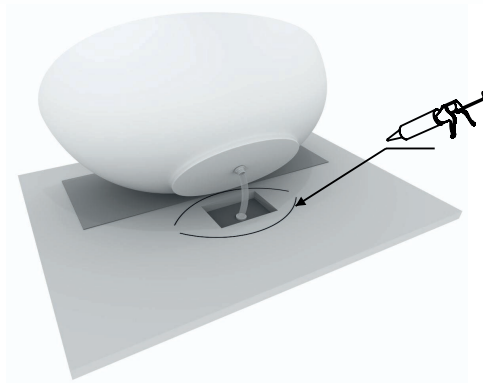

(C)

